





QUICKSTART GUIDE

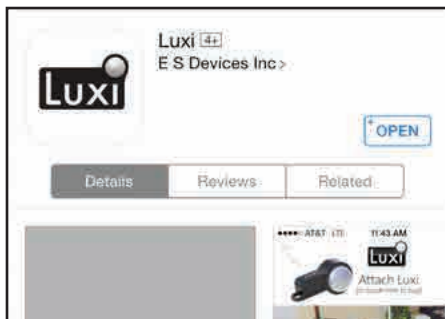

1. Download the [Luxi application](#) from the iOS App Store.

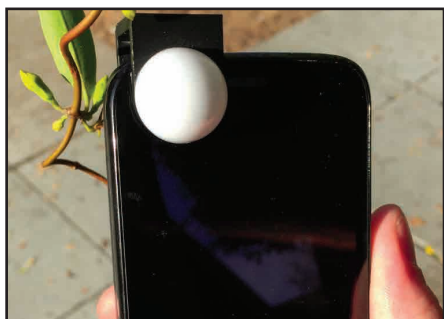

2. Attach the Luxi For All clip to your iPhone, iPad, or iPod Touch. Align the white diffusion dome so that it is positioned directly in front of the front-facing camera on your device.



3. Hold your device in front of your photographic subject to measure the light. Tap the HOLD button to freeze the readings on your screen.



4. Use the Luxi app's suggested exposure readings when taking a photo with your DSLR or other camera. Note that you may need to calibrate; instructions are available in [our User's Guide](#).